 
 
 
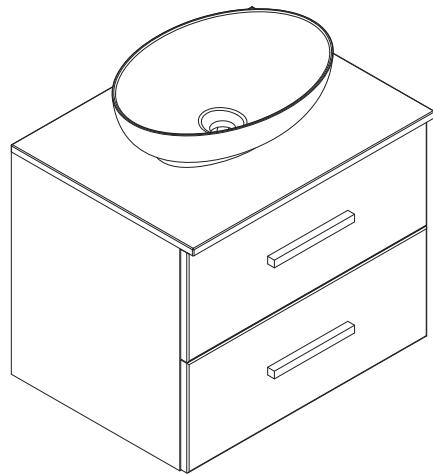 


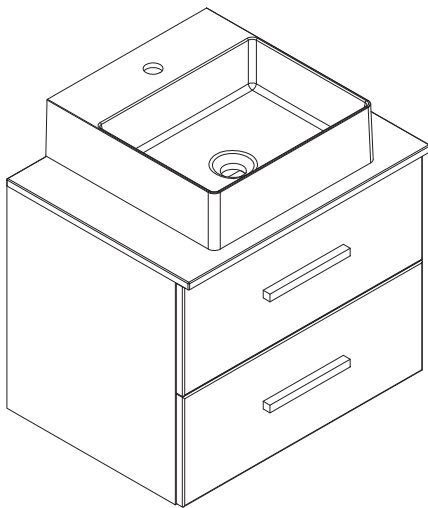

DANSANI®

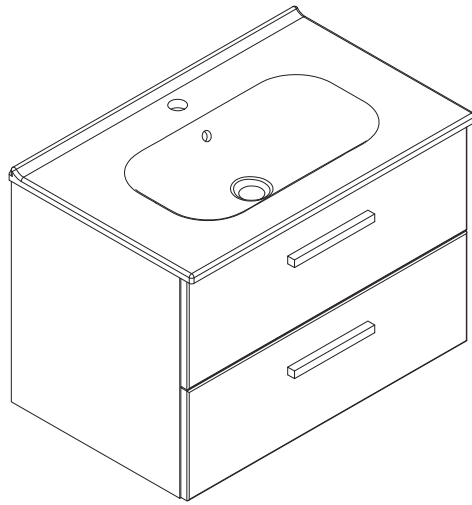 


8x



5-500

2x



30010190

8x

 
 


5,0-60SU


8x




195000000

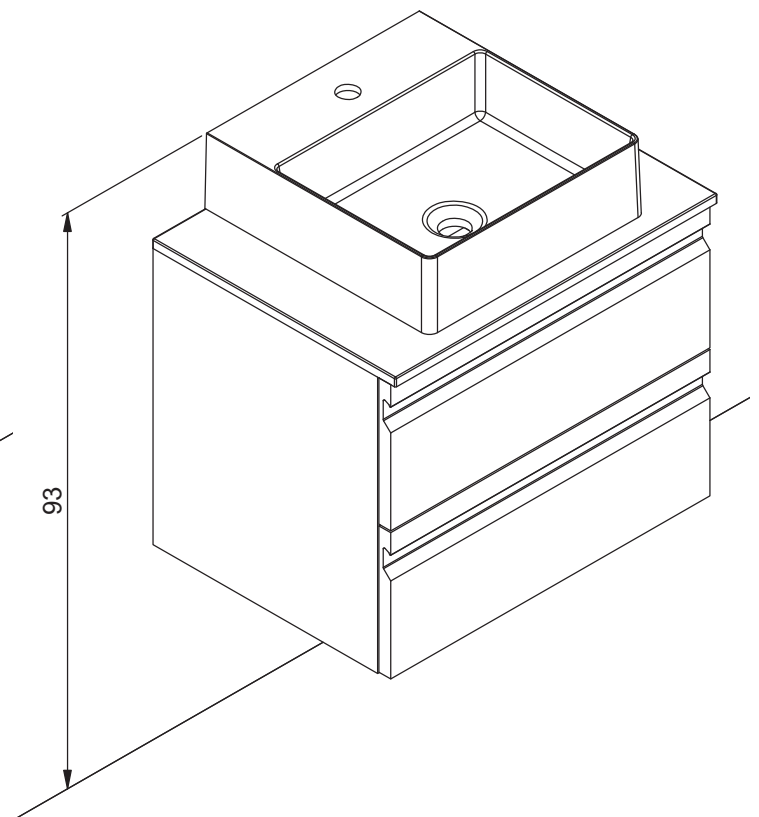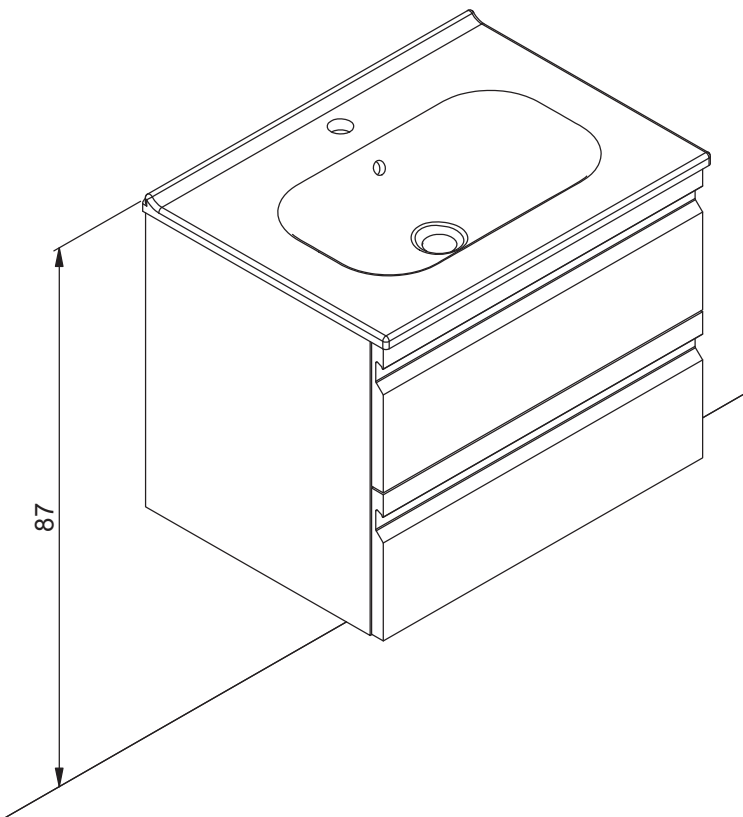


Menuet
X=76

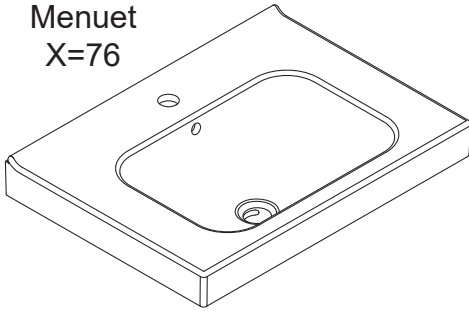 


Andante
X=78

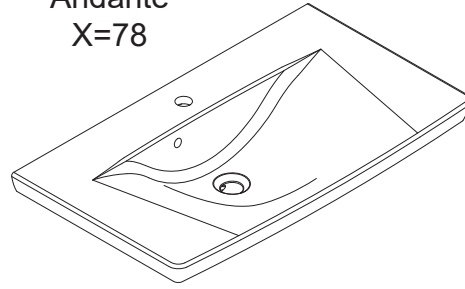 


Kantate
X=81

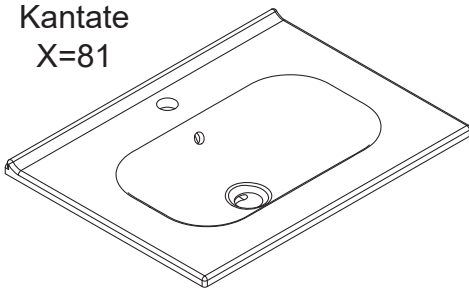 


Allegro / Aura
X=79

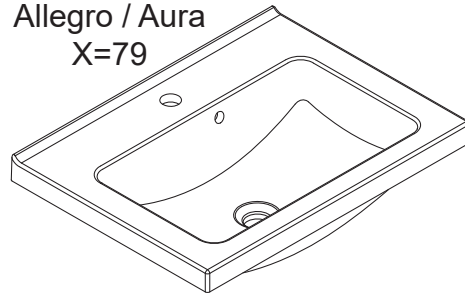 


Fresco / Facet
X=81,1

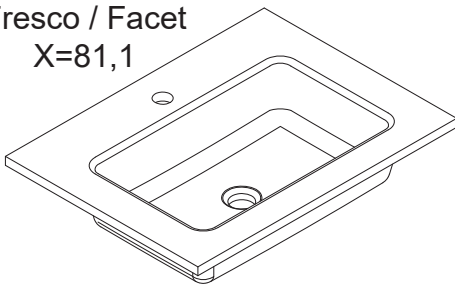 


Canto
X=73,9

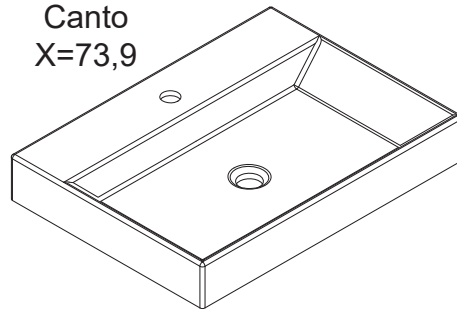 


Sonate
X=75,4

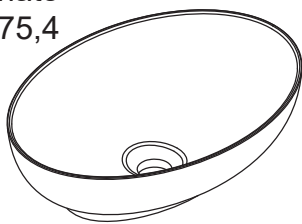    

 



Marcato
X=75,4

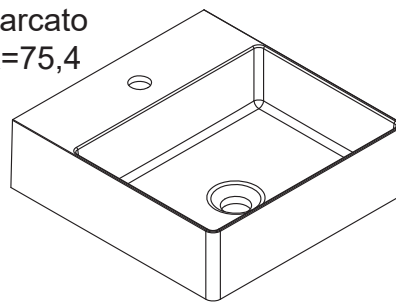


1

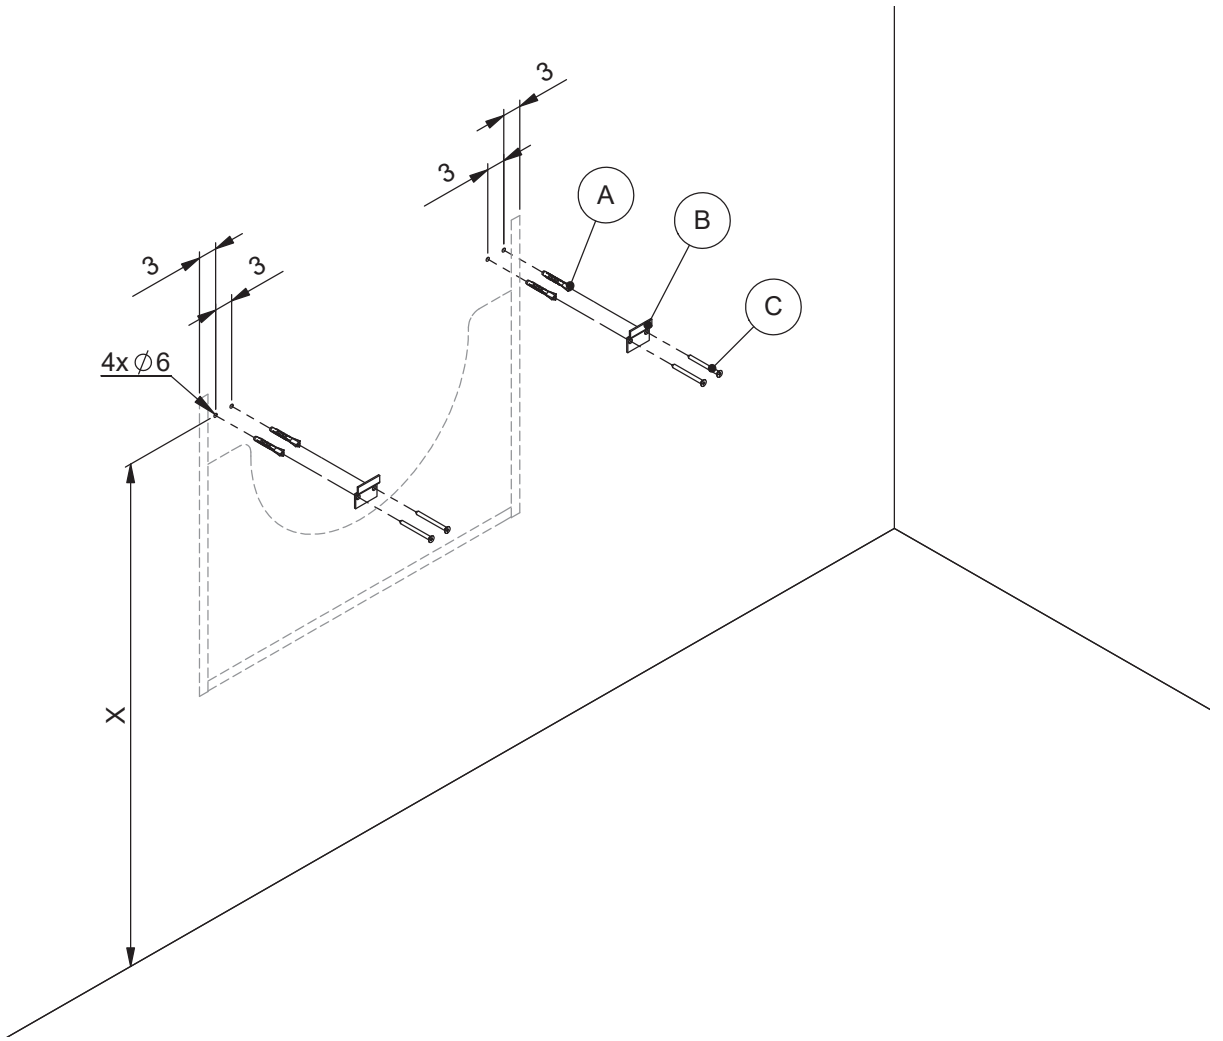


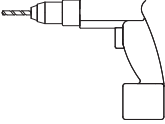	4x	2x	4x
			
	5-500	30010190	5,0-60SU
	(A)	(B)	(C)



 
2

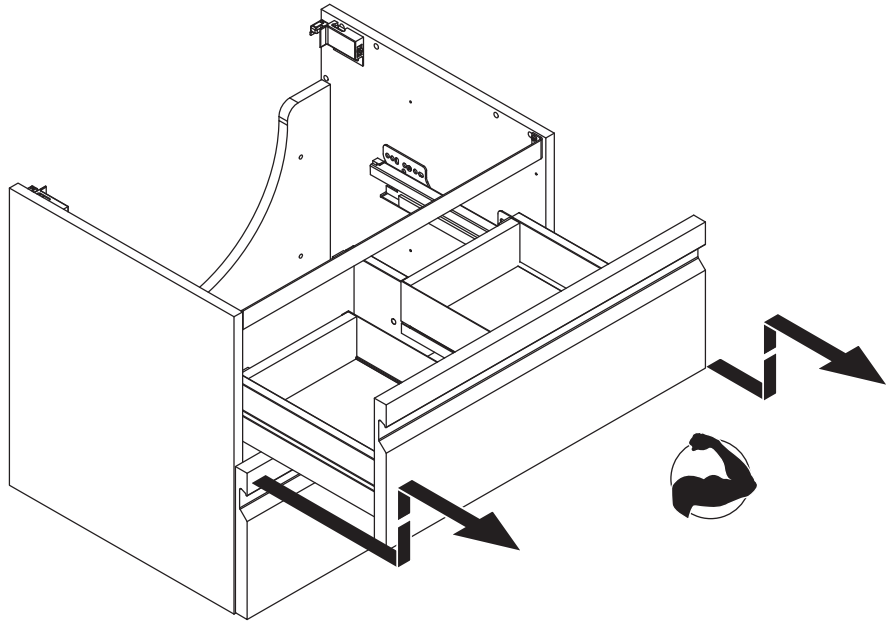



3

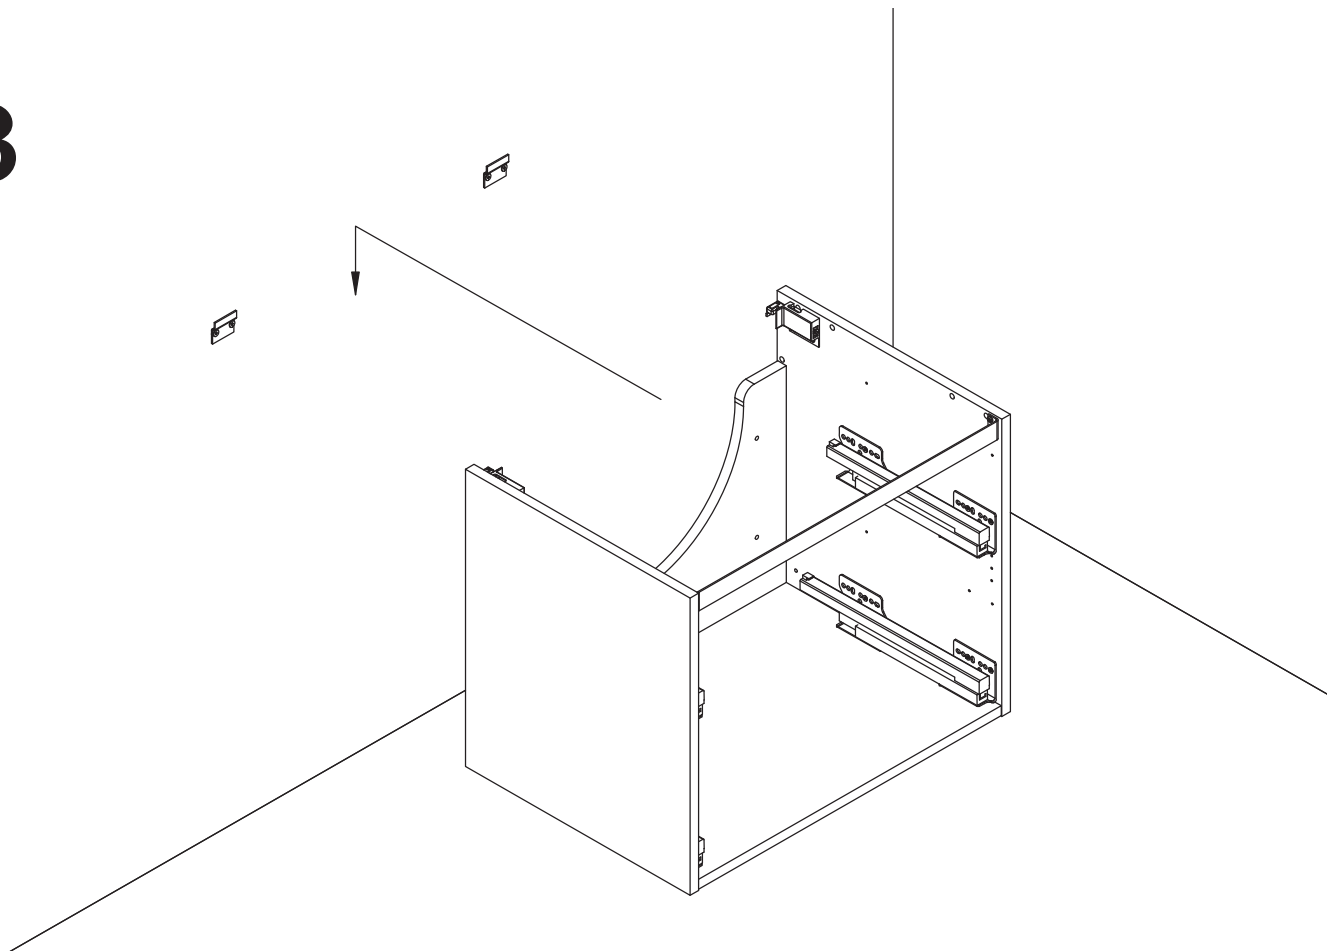 


4A

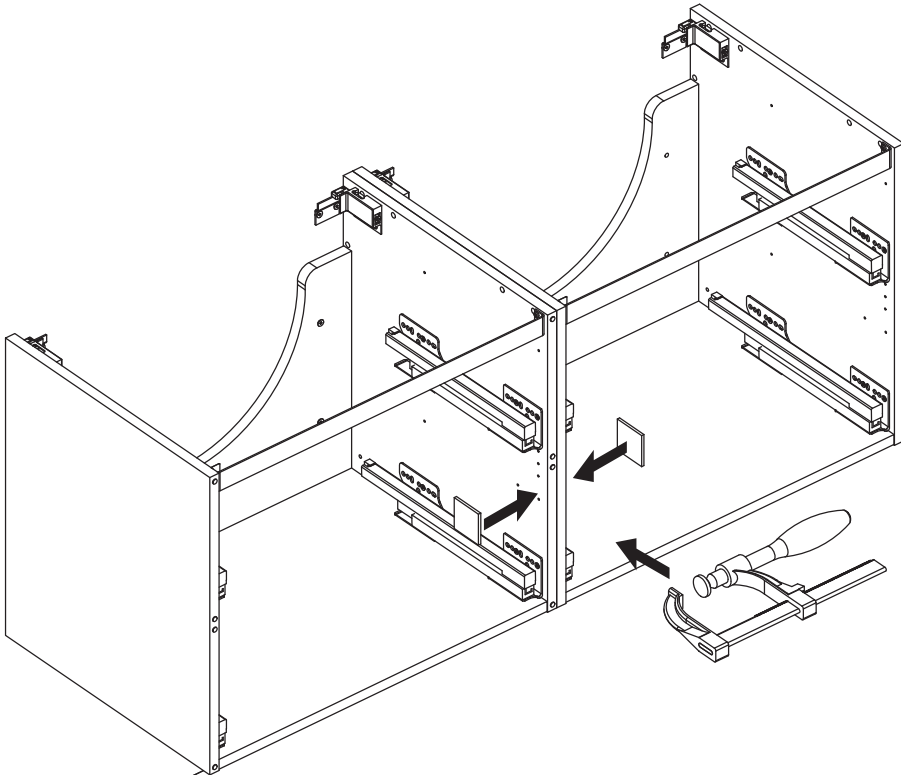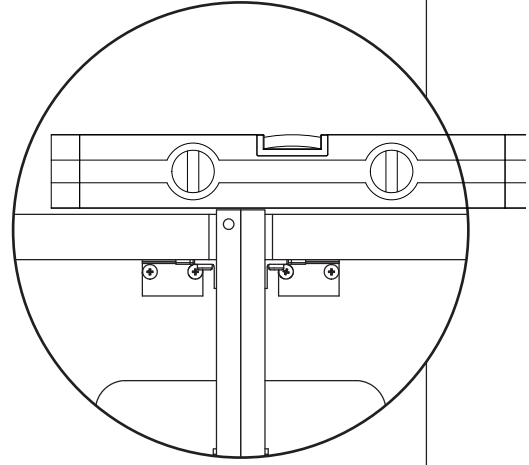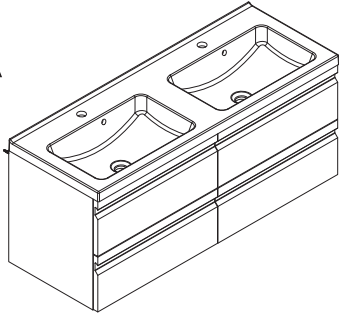   

4B

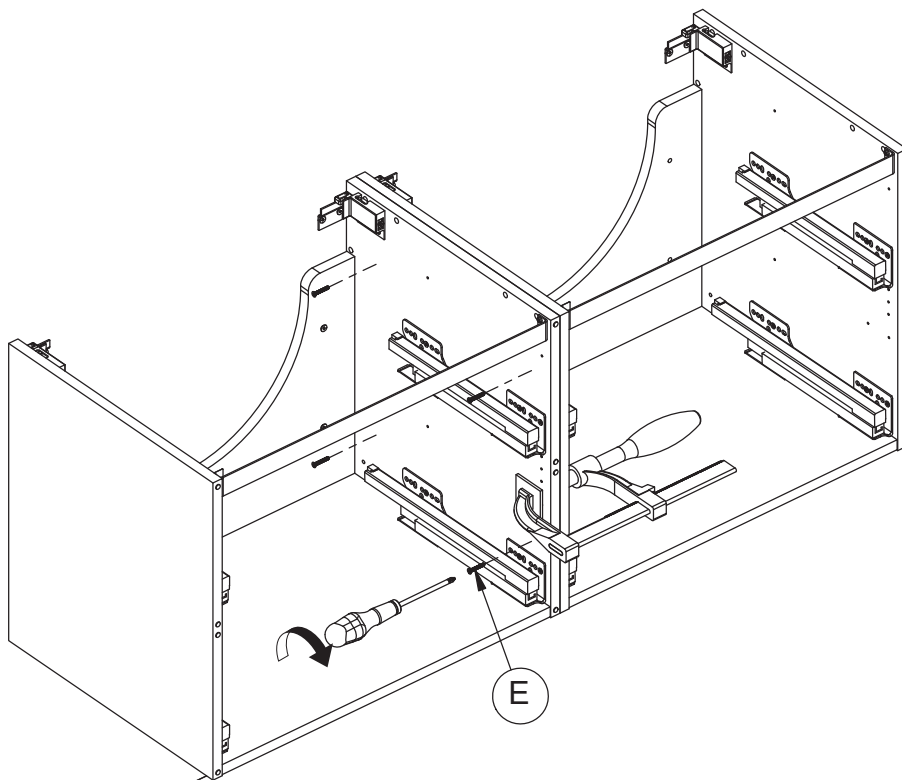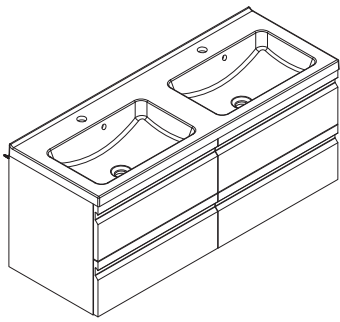  


4x




4,0x30SU

E

  
5

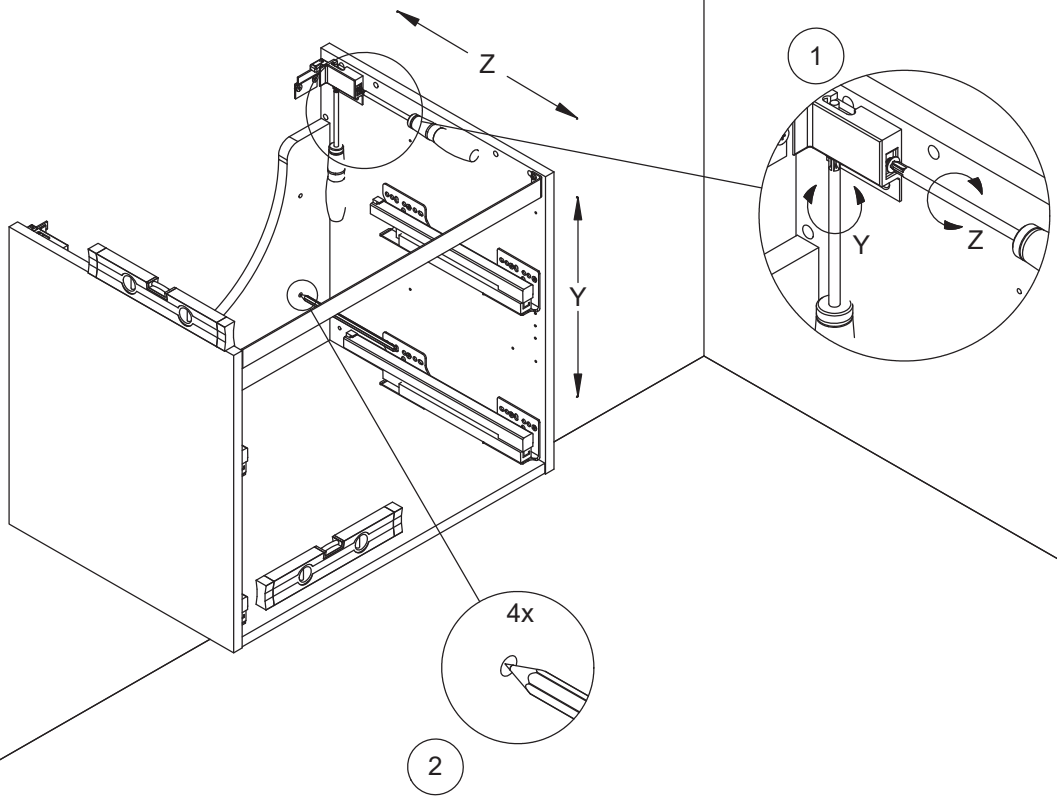

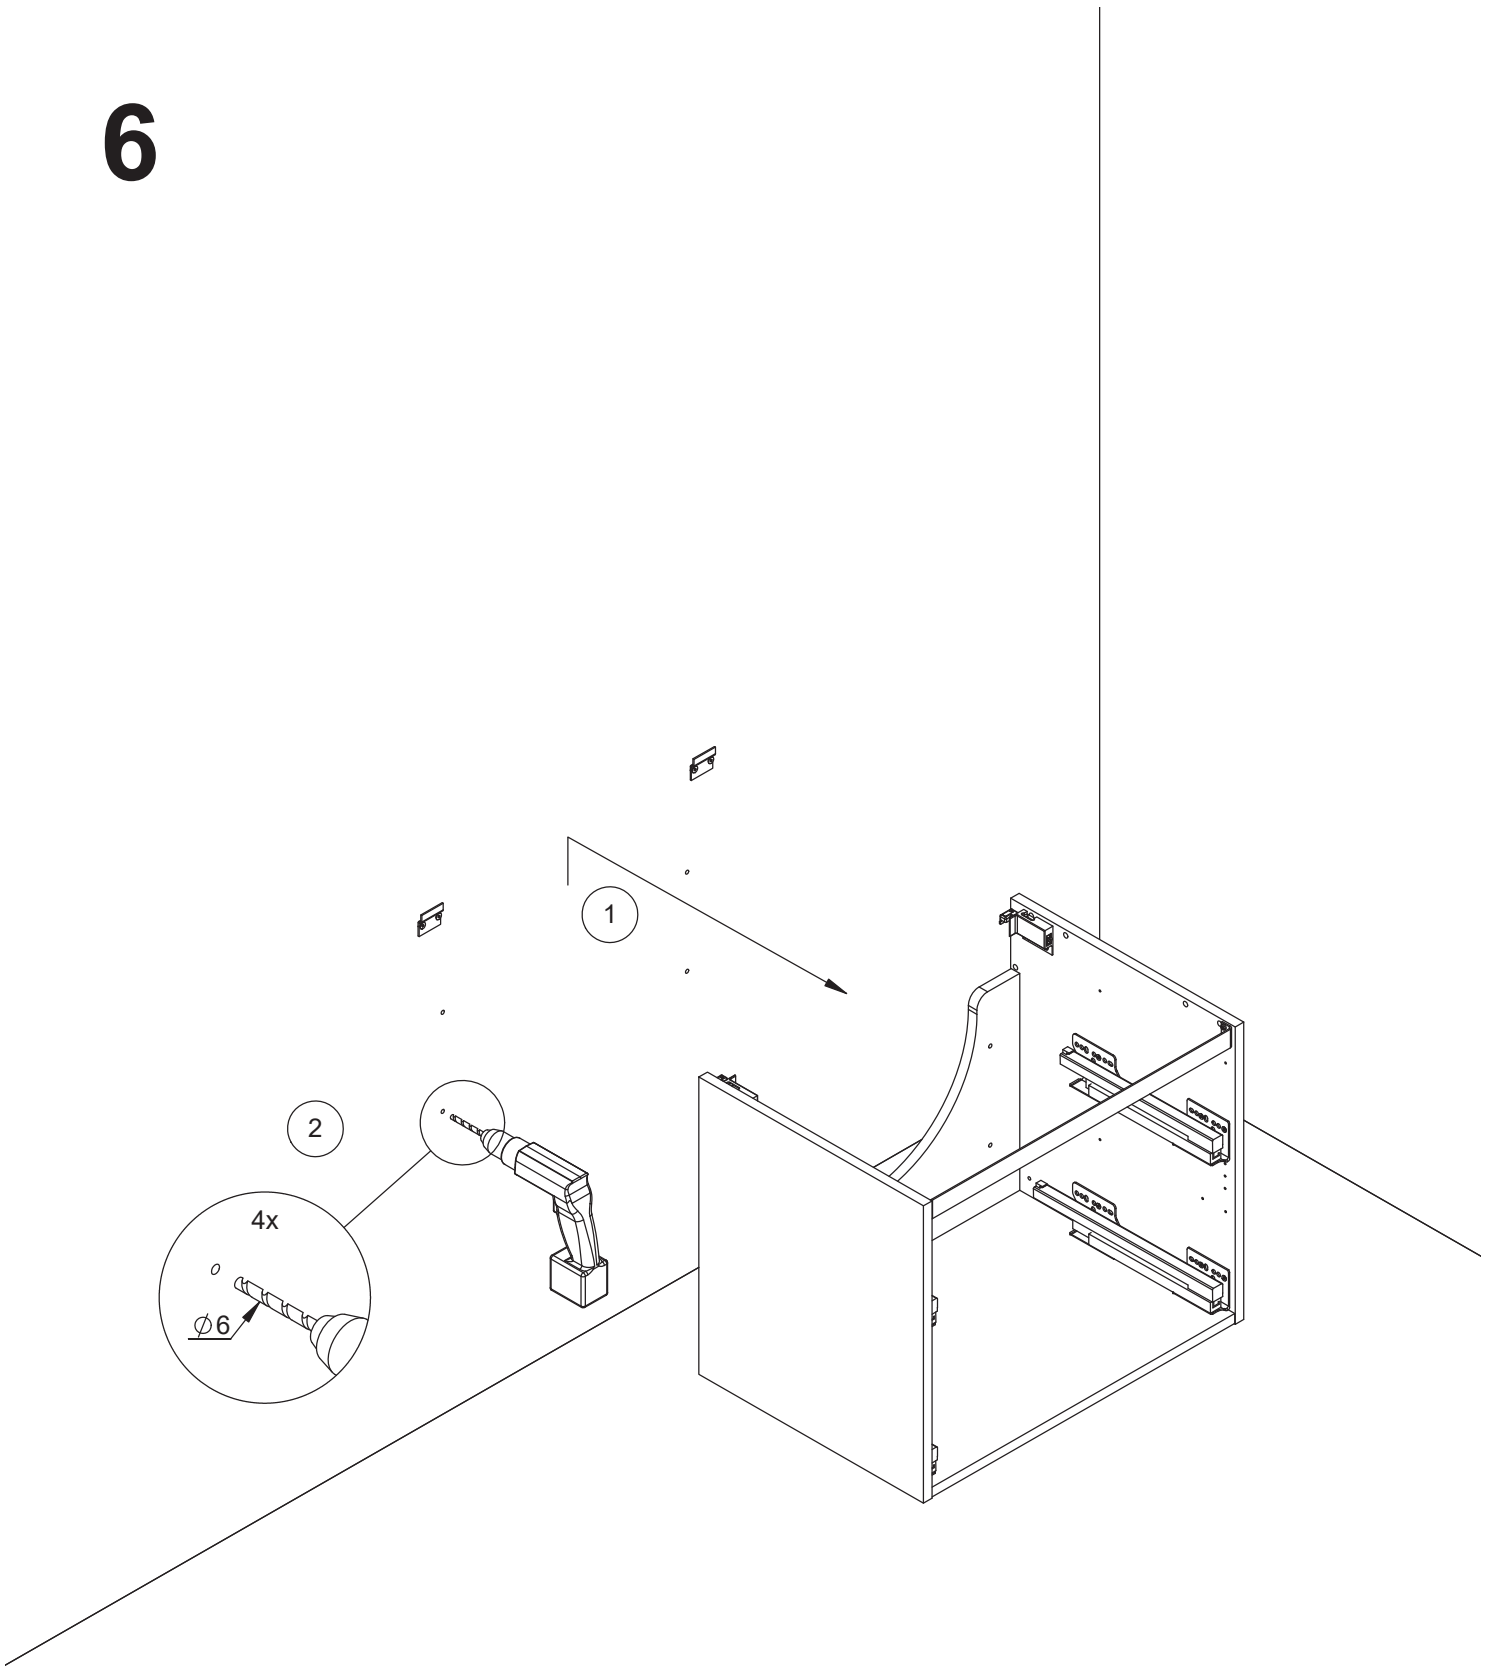

6


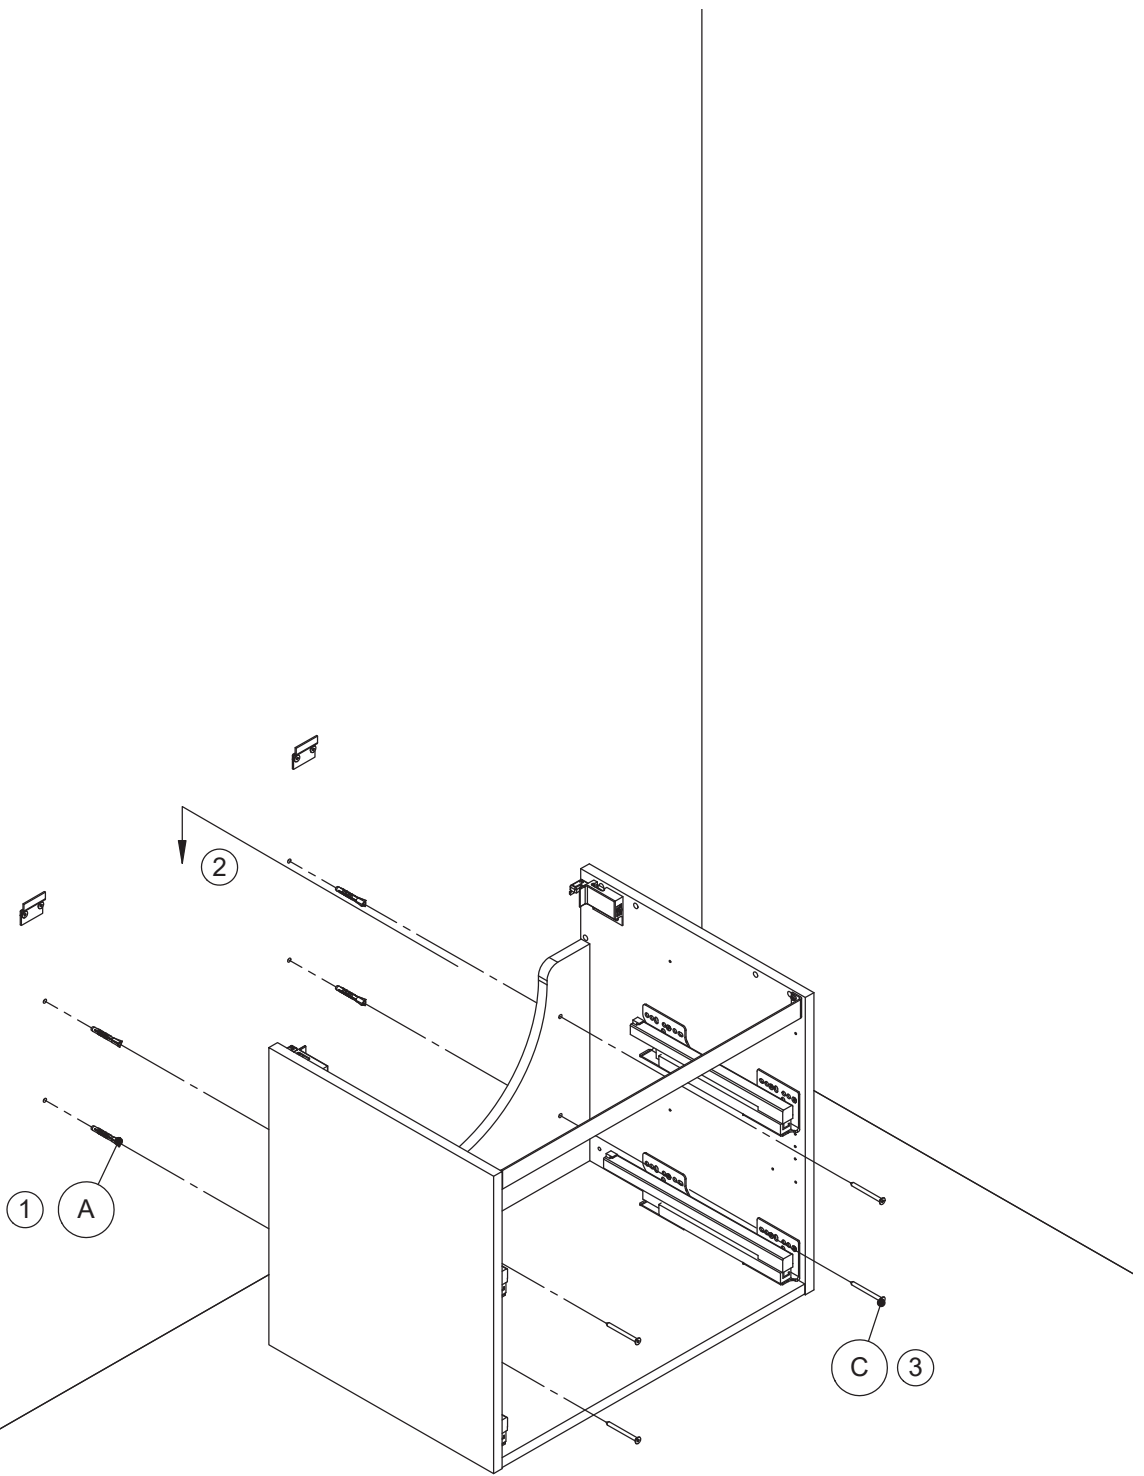 


7




4x	4x
	
5-500	5,0-60SU
(A)	(C)

  8

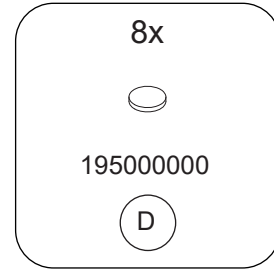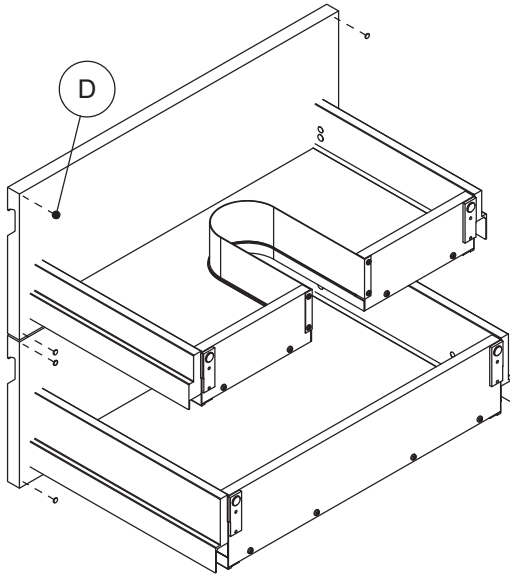


9

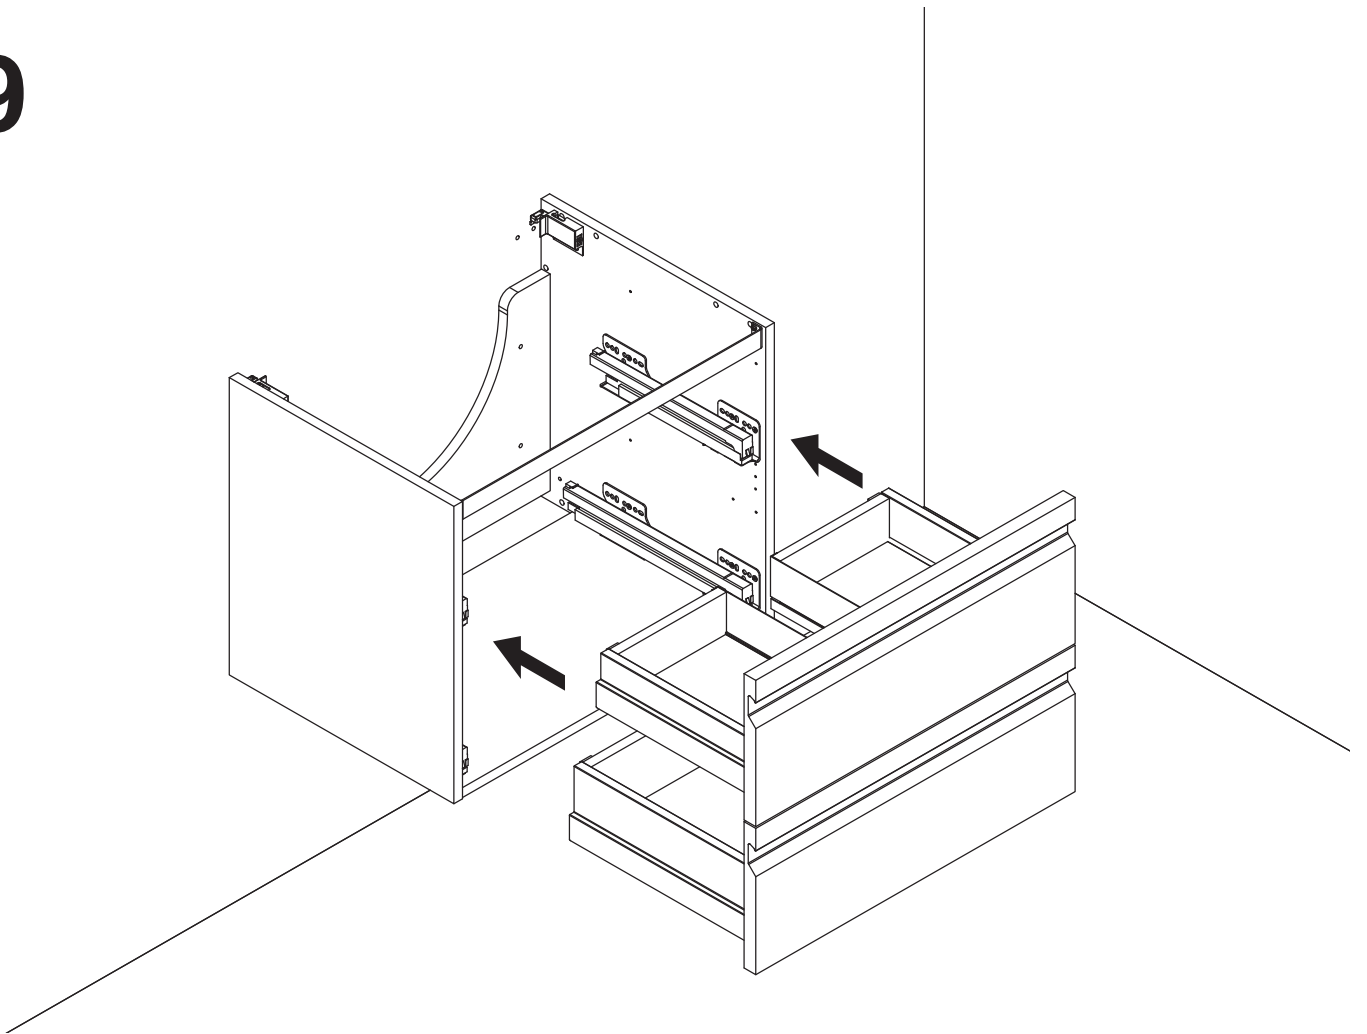 





10

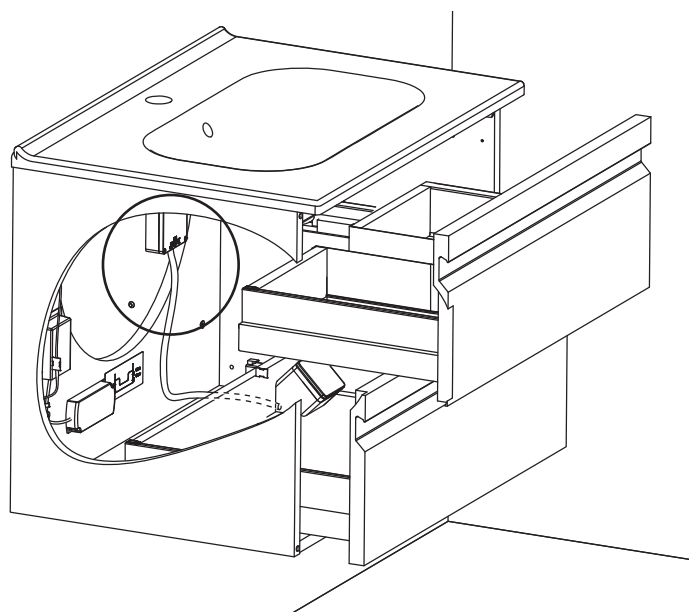 


11A

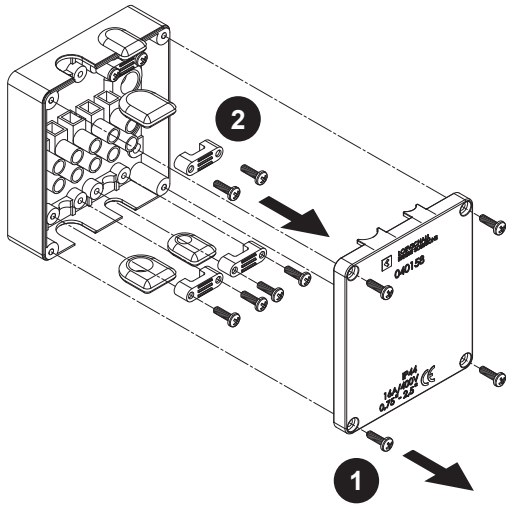 


11B

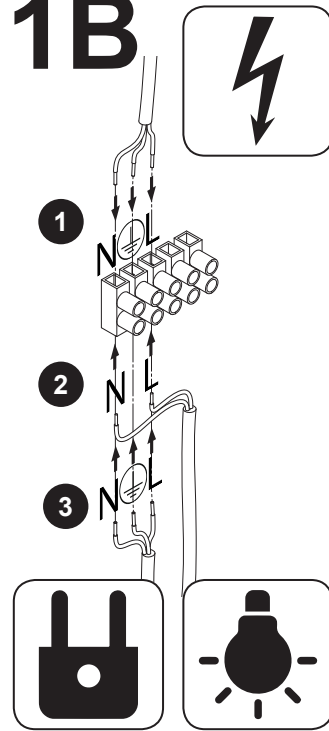 


11C

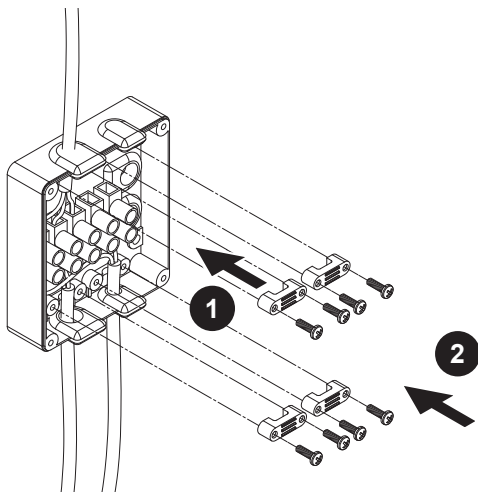 


11D

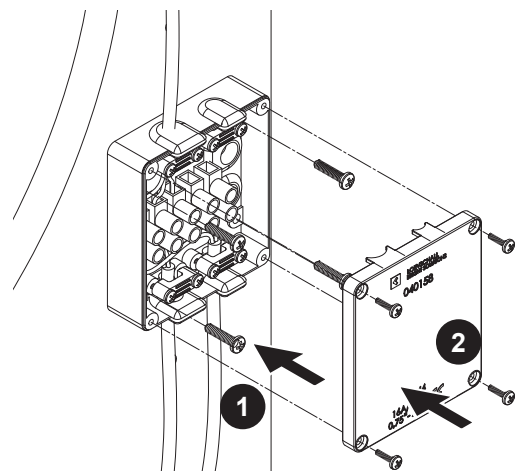 







12

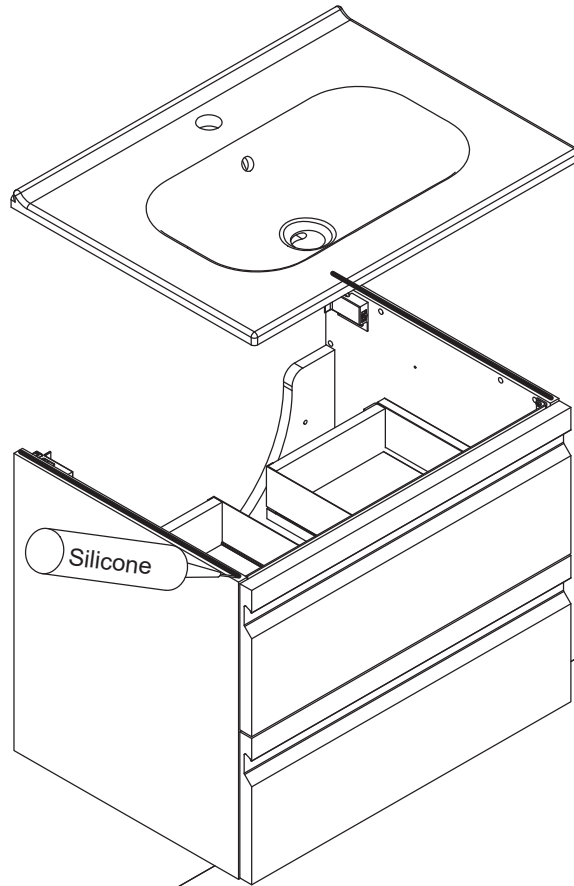 

13

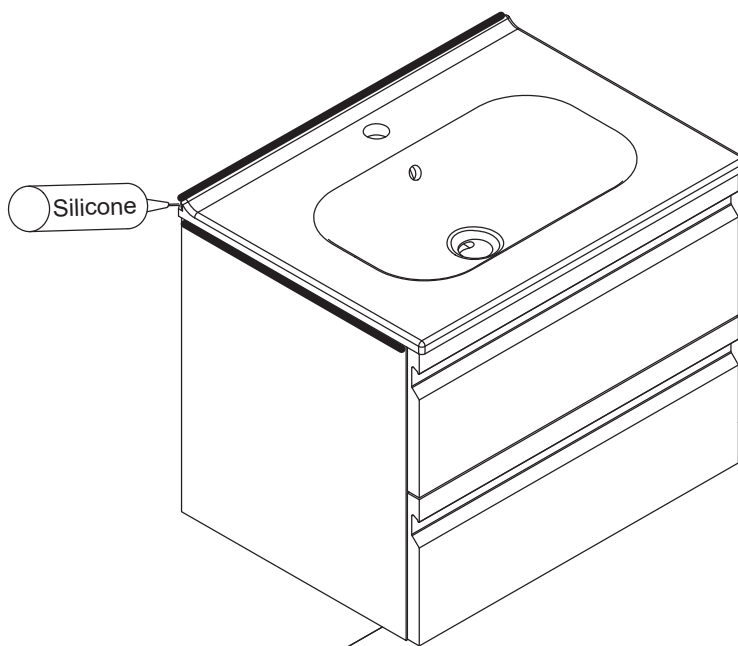 

14

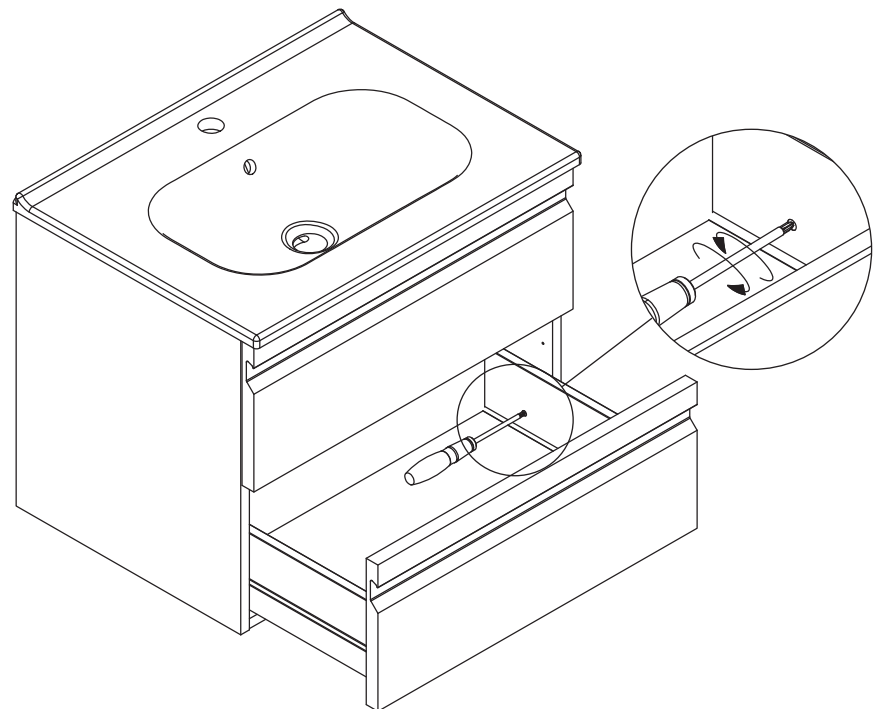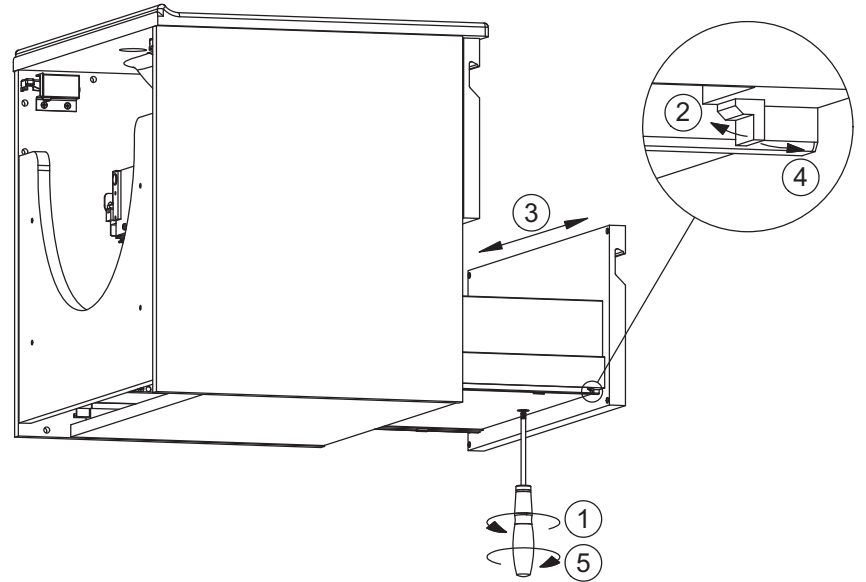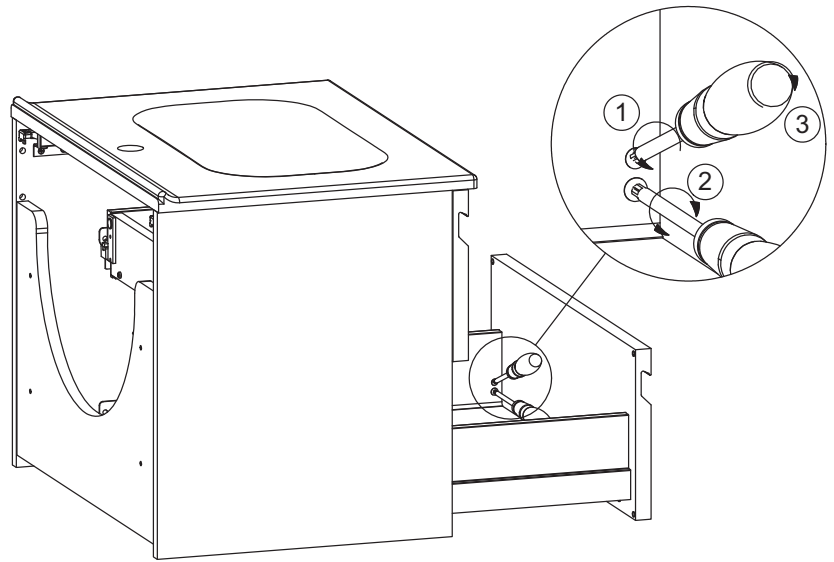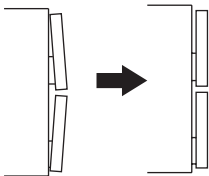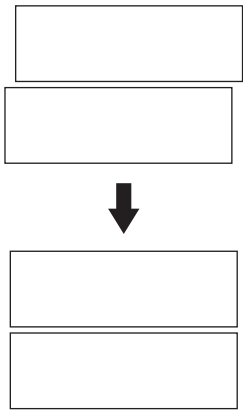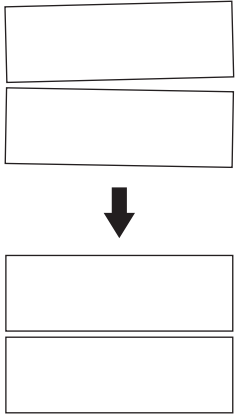      

15

